


Included:
1 x Console (A)
2 x 3 mm - 13 mm Flush screw (B)

Please Note: Remote, Mounting base, and power cable sold separately.

CAUTION: Read and understand all instructions before beginning.

Assembly

1

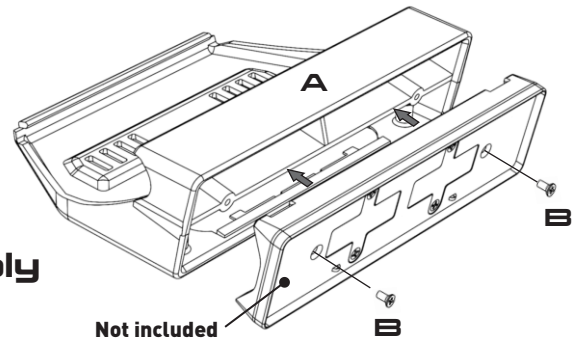

NOTE: If installing the 12V power cable (not included), plug it in before installing the mounting base.

Installation

2



Start by pulling down firmly on the front of the factory header shroud to expose the wiring and connector for the warning lamp.

3



Press in on the metal tabs holding the warning lamp into the header shroud and remove lamp.

4




Press on the top of the red tab (closest to the wires) to release connector to the warning lamp.

5




Install the warning lamp into the Trigger overhead mount by inserting into the opening until the metal tabs snap in place. Then plug the connector back into the lamp.

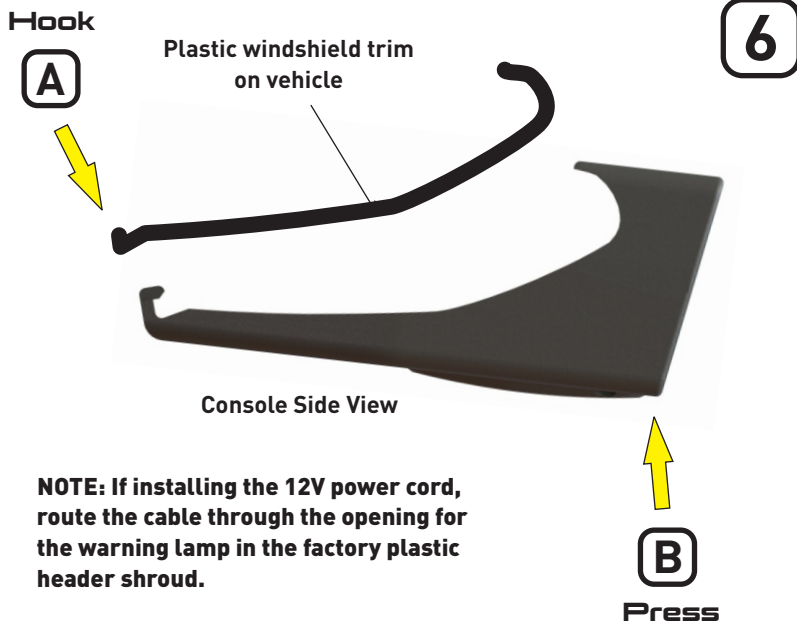

(A) While the header shroud is loose, hook the rear tab in the location shown above.

(B) Press the front where indicated in the picture to snap the console in place. That's it! Good job.

12V Cable wiring

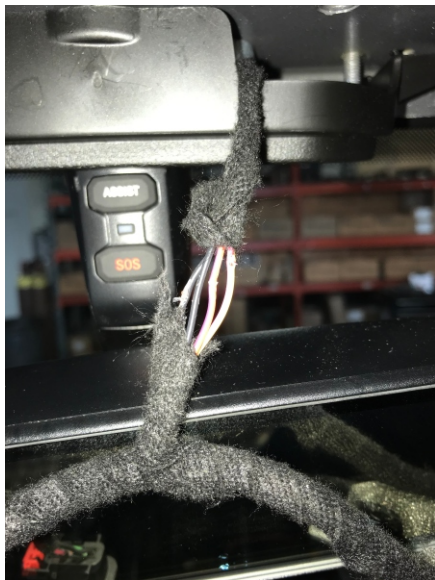

Finished!



If running the optional 12V power to the RF remote, open up the factory rear view mirror harness and locate the black wire for ground (attach black wire from 12v harness) and the Orange/Pink for keyed ignition (Red and white wires from 12v harness) . Use wire splices or a preferred method to tie into the wires. **NOTE: Use this as a guide, our example was an early production vehicle, always test the wires before connecting.**

CAUTION: Installation of this item is at the customers risk and AAC is not responsible for damage to the vehicle caused by improper installation. Professional installation is recommended.

Advanced Accessory Concepts Corona CA. Tech help: 951-339-1469
Please contact us or see the triggercontroller.com website for warranty info.